

# Glance

40010576 - 0612



**UK**

**Installation Guide**

**IRL**

 faber

## General



1



2




3




4

Bolt &amp; Nut

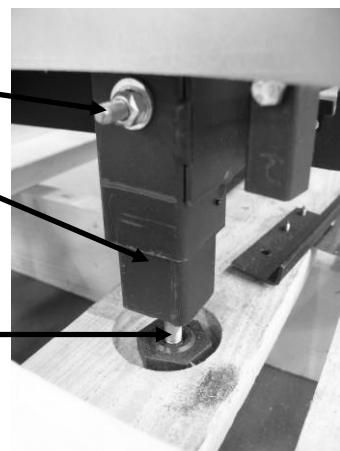Rough  
adjustmentFine  
adjustment

5

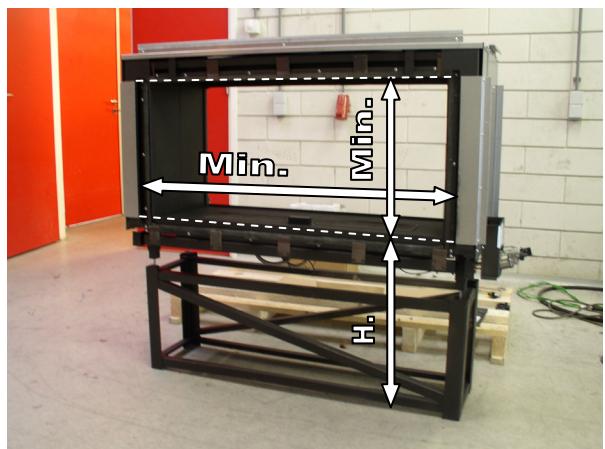


6


## Situation with Frame



7

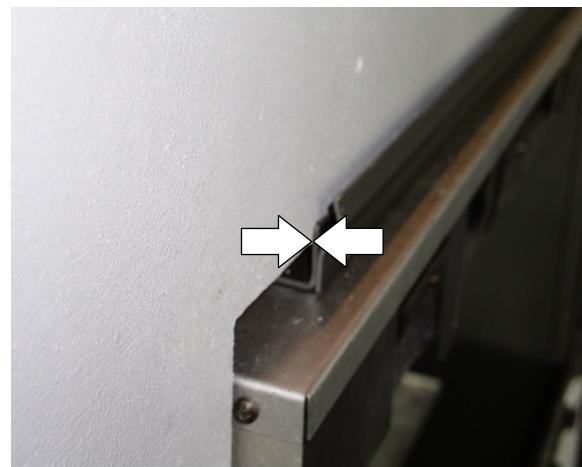


8

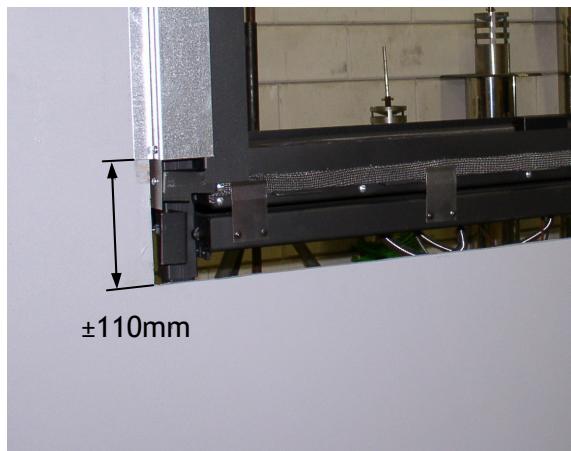

9



10

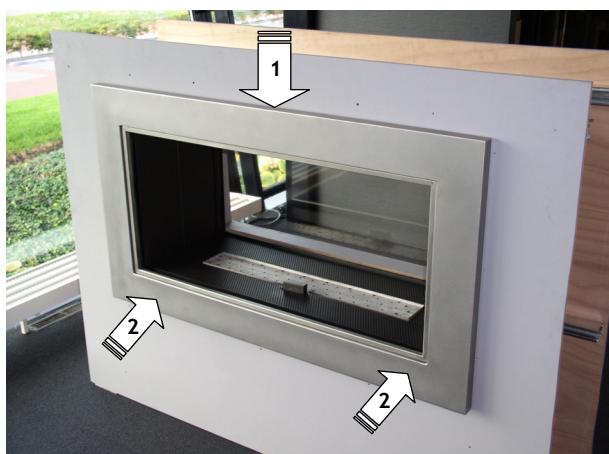

11

## Situation Frameless



12



13



14



15

## To remove/replace of the glass



16



17



18



19



20

---

## Table of contents

1	Introduction .....	6
2	Safety and general information .....	7
3	Installation requirements .....	8
4	Instruction for Installation .....	10
5	Commissioning (functional checks) .....	13
6	Handing over (final check and customer briefing) .....	13
7	Servicing .....	14
	Appendix A: Example calculation.....	16
	Appendix B: Flue restrictor.....	17
	Appendix C: Plaatsing aan-/afvoersysteem.....	18
	Appendix D: Spare parts .....	20
	Appendix E: Technical specifications .....	21
	Appendix F: Dimensions.....	22
	Appendix G: Terminal position.....	23

# 1 Introduction

**Note:** these instructions should be read carefully and retained for future reference. Please leave these instructions with the user.

The Glance is developed to be installed either with a frame (see figure 1) or frameless (see figure 2) on both sides. A combination of both is also possible what makes three possibilities:

- two sides Framed
- one side Frameless and one side Framed
- two sides Frameless

## Special features:

- The appliance can be filled either with a realistic log set (see figure 3) or Carrara pebbles (see figure 4)
- Room sealed appliance, inlet and outlet are led to the outside using a natural draught concentric pipe system (100 mm/150 mm) (no power fan required)
- Air supply and flue-gases go to outside atmosphere through wall or roof. A maximum horizontal extension of 6 meters is possible
- Remote Control standard
- Meets the requirements of the European Gas Appliance Directive (GAD) and carries the CE mark

## 2 Safety and general information

Before installation, ensure that the local distribution conditions (identification of the type of gas and pressure) and the adjustment of the appliance are compatible.

This gas appliance is factory set and can not be adjusted.

This appliance does not contain any component manufactured from asbestos or any asbestos related products.

The pilot and flame sensing device fitted to this fire is also a safety device. If for any reason any part of the pilot assembly is to be replaced, the entire assembly, including the pilot burner, thermocouple, electrode and injector, must be exchanged complete for a pilot assembly from the original manufacturer only.

### Ventilation

This appliance is room-sealed and doesn't require purpose provided ventilation.

Never use the appliance if it has a broken glass.

### General safety

It is the law in the UK that all gas appliances, are installed by a competent person in accordance with the Gas Safety (Installation and Use) Regulations (as amended), the relevant British Standards for Installation work, Building Regulations, Codes of Practice and the manufacturers instructions.

Always use an additional guard if there are elderly, infirm or children in the same room of the appliance.

The installation should also be carried out in accordance with the following where relevant:

- BS5871 Part1
- BS5440 Parts 1 & 2
- BS1251
- Building Regulations Document J (as applicable)
- Building Regulations and Standards issued as relevant by the Department of the Environment or the Scottish Development Department
- In the Republic of Ireland installation should be carried out in accordance with IS813, ICP3, IS327, Building Regulations, Codes of Practice, the manufacturers instructions and all other regulations in force

Failure to comply with the above could leave the installer liable to prosecution and invalidate the appliance warranty.

### 3 Installation requirements

**Note:** Since the appliance is a source of heat, circulation of air occurs. Therefore it is of importance that you do not use the appliance shortly after a renovation of the home.

Because of the natural circulation of air, moist and volatile components from paint, building materials, carpet etc. will be attracted. These components can settle onto cold surfaces in the form of soot.

As on all heat producing appliances, soft furnishings such as blown vinyl wallpaper placed too near to the appliance may become scorched or discoloured. This should be born in mind when installing the appliance.

#### 3.1 Builders opening

The appliance can be installed in a new made hollow wall construction only. For the dimensions of the appliance, see appendix F.

In both cases keep the following in mind:

- do not place the appliance on combustible materials or carpets
- both walls have to be made of non-combustible material (e.g. Promatect)
- do not place the lintel, surround or marble stone directly onto the appliance. If possible, apply a lintel made of cement or something similar
- always ventilate the space above the appliance. Use a Faber ventilation grid
- to avoid cracking, the plaster has to dry for at least 1 day per millimetre plaster
- to avoid discolouring the plaster has to be heat resistant to min. 100 °C

#### 3.2 Flue requirements

- The appliance is of the type C31. The appliance will need to be supplied with the approved flue pipes and terminal, it is not possible to supply your own
- a horizontal extension with elbows is allowed for a maximum of 6 meters (depending on the situation)
- Minimal 1 meter vertical and maximal 12 meters vertical flue routing

Determine on the base of the example calculations in Appendix A and on the base of the table in Appendix B if the desired situation is possible. To establish this you will need to calculate:

- The effective height (this is the real difference in height between the upper side of the appliance and the terminal)
- The total horizontal extension. This is the total horizontal flue length where:
  1. each elbow, which is in the horizontal area, counts for 2 meters
  2. each 90-degree bend, which is in the horizontal area, counts for 2 meter
  3. each 45-degree bend, which is in the horizontal area, counts for 1 meter

- 
4. elbows and bends at the transition of horizontal to vertically are not to be counted
  5. the wall mounted terminal counts for 1 meter

### **3.2.1 Terminal position**

Verify if the required terminal position meets the local installation regulations regarding disturbance, good functioning and ventilation (see also appendix G).

Note:

- The terminal must be located so that the outlet is not obstructed. If the flue terminal is located within 2 meters of a footway path or where people could come into contact with it, then a suitable terminal guard must be fitted
- Terminals located close to shared walkways, footpaths etc. could be subject to legal constraints and this should be pointed out to the customer before installation. If in any doubt about flue location advice should be sought from local building control, or if appliance-related, from the manufacturer including wherever possible a dimensioned sketch
- Avoid locating the terminal in close proximity to plastic materials such as gutters or other combustibles. If this is unavoidable then a suitable deflector should be made.
- Some important requirements for a good functioning are
  - The wall-mounted terminal has to be at least 0,5 m off
    - Corners of the building
    - Below eaves
    - Balcony's etc. unless the duct is dragged to the front side of the overhanging part
  - The roof mounted terminal has to be at a distance of at least 0.5 meters of the sides of the roof, excluded the ridge

### **3.2.2 Using an existing chimney as air inlet**

You can connect the appliance onto an existing chimney. The existing chimney then functions as air supply, where a flexible stainless steel liner (to BS715) of 100 mm performs the flue function.

Requirements:

- Any existing chimney used as an air supply must only service this appliance.
- A chimney that has previously been used for solid fuel must be swept before use.
- The existing chimney needs to be airtight.
- The existing chimney needs to have an opening of min. 150 x 150 mm.
- The chimney needs to be intact and well looked after.
- Use the adjustable roof-mounted-terminal especially made for this, and the chimney connection set.

## 4 Instruction for Installation

### 4.1 Gas Connection

Installation pipes should be in accordance with BS 6891. Pipe work from the meter to the appliance must be of adequate size.

The complete installation including the meter must be tested for soundness and purged as described in the above code.

A means of isolation must be provided in the supply to facilitate servicing.

The connection should be made in 8 mm copper or similar semi flexible tube. (max 1 meter). Ensure that the gas pipe does not interfere with the removal or replacement of the burner tray of the controls.

The gas connection is nut and olive suitable for 8 mm pipe.

### 4.2 Preparing the appliance

- Remove the packaging and the pallet under the appliance
- Determine the position and height where the appliance has to be placed.
- Make a rigid construction to put the appliance on (see figure 6 and 13)
- Place the appliance on the construction.
- Measure the actual height
- Pre-adjust the total height of the appliance considering the desired height (see figure 1 and 2). There are two ways to adjust the height:
  - Rough adjustment; by removing the nut and bolt. Shift the leg 30mm and replace the nut and bolt
  - Fine adjustment; by adjusting the couple legs

### 4.3 Placing the appliance

The appliance can be installed either with a frame or frameless. The total thickness of the wall can be calculated according to the examples below.

Example using Promatect 12 mm			
	Depth of opening	Gap between glass and False chimney breast	Wall thickness
Frame / Frame	n.a.	n.a	192+192=384mm
Frame / Frameless	1x12mm	1x10mm	192+(210+10+12)=424mm
Frameless / Frameless	2x12mm	2x10mm	(12+10+210)+(210+10+12)=464mm

- Position the gas control in a way it will be accessible behind the inspection lid
- Prepare the gas connection
- Check the appliance height again and adjust when necessary. Make sure the appliance is level
- Assemble the flue system onto the firebox

#### 4.4 Placing a fire with frame in a wall

- When placing an appliance with a frame, the appliance has to stick out of the wall with 18 mm (see fig.8). There are guides at the side and the top of the appliance (see fig.10). If you use the guides, 18 mm of the appliance will automatically be on the outside of the front of the wall.
- Keep a free area of 110 mm at the bottom side (see figure 9)
- Apply the plaster or wallpaper
- Place the frame over the appliance

#### 4.5 Placing a frameless fire in a wall

- When placing an appliance, it has to fall back behind the wall
- Calculate the required space between the appliance and the wall according to the example above
- Build up the wall (see figure 13)
- Keep a free area between the glass and the upside of the false wall promote ventilation
- Apply the plaster or wall paper

#### 4.6 Removal of the glass

Two the suction lifters (see figure 16) which are delivered with the appliance to make removal easier.

- Place the suction lifters at the glass
- Remove both screws at the right end of the appliance
- Move the glass carefully upwards
- Turn the glass with the underside towards yourself
- Move the glass carefully downwards
- Take the glass out

Placement happens in reversed order.

#### 4.7 Placing the log set

- First place the chips all over the burnerplate, see the card delivered with the logset and
- Spread the chips as much as possible (keep the pilot burner area free of chips)
- Place the log set as shown

#### 4.8 Placing the pebbles

- Place the pebbles all over the burnerplate (see the figure 4)
- Spread the pebbles as much as possible
- Keep the pilot burner area free of chips

## 5 Commissioning (functional checks)

### 5.1 Pilot ignition check

- Ignite the pilot light as described in the user manual
- Check if the pilot burner stays alight
- Extinguish the pilot burner


### 5.2 Check functional burner and pilot burner

The appliance is preset to give the correct heat input. No further adjustment is necessary.

Always check the inlet pressure and burner pressure:

- Turn off the gas valve on the appliance
- Turn the inlet pressure test point C and apply the manometer
- Check if the measured pressure is the same as the prescribed pressure
- Perform this measuring when the appliance burns on full capacity and when only the pilot ignition burns
- When the pressure is too low, check if the gas pipes are made of material with the right diameter
- When the pressure is too high (more than 5 mBar overpressure) you can't install the appliance and you should contact your gas company
- Always check the burner pressure when the functional pressure is right
- Open the burner pressure test point D
- The pressure should match the described pressure. If this is not the case, then contact the supplier

Note: After checking the burner pressure, the inlet pressure test point has to be shut and checked for gas-tightness.

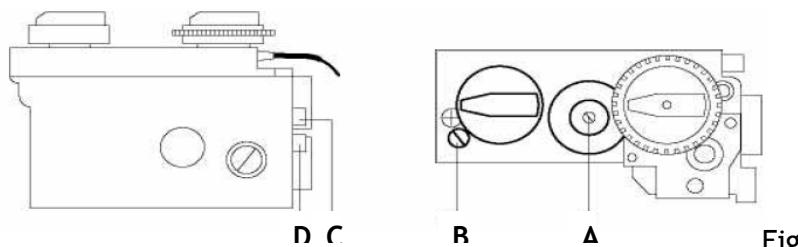

- A. Governor
- B. Adjustment screw pilot flame
- C. Inlet pressure test point

## 6 Handing over (final check and customer briefing)

- Instruct the customer on the full operation of the appliance and the remote control, including replacement of batteries
- Advise the customer how to clean the appliance including the glass
- Hand over these instructions including the user guide to the consumer
- Recommend that the appliance should be serviced by a competent person at least once a year

## 7 Servicing

To ensure safe, efficient operation of the appliance, it is necessary to carry out routine servicing at regular intervals.

It is recommended, that the fire is inspected/serviced by a competent person at least once a year.

**Important:** Turn off the gas supply before commencing any servicing. Always test for gas soundness after refitting the appliance!

### 7.1 Routine annual servicing

- Clean (if necessary):
  - a. the pilot system
  - b. the burner
  - c. the combustion chamber
  - d. the glass
- Check the log lay and replace the embers (if applicable)
- Do the functional test as described in chapter 6
- Check the flue system and terminal on damage and soundness (visual inspection)

#### 7.1.1 Cleaning the glass

Depending on the intensity of use, you can get a deposit on the glass. Remove the glass (see chapter 4.6).

Remove the deposit with a special ceramic glass cleaner (ceramic cook-top cleaner) as follows:

- Remove the front and the back.
- Clean the glass. Handle the glass with clean hands, wear gloves if possible.
- To fit the glass, proceed in reverse order. Make sure that the log set has been installed correctly before fixing the glass.

**Attention:**

Before placing the glass: check the glass sealing rope is in good condition and makes an effective seal. Be sure that there are no fingerprints on the glass. It is not possible to remove those prints after you burn the appliance for a while (they are burnt in). Place the glass in front of the appliance and fix the glass frame or use the glass clamps.

**7.1.2 *Cleaning the combustion chamber and burner***

If the burner is visibly damaged, this can affect the distribution of the flame, if so then replace the burner.

Burner tray assembly

Remove the front, glass, and log holder (if applicable)

Break the gas supply at the control valve.

Unscrew the burner assembly and take them out of the combustion chamber.

## Appendix A: Example calculation

### Calculation 1:

#### Calculating horizontal extension fig. 2a:

Flue lenght C + E = 1m + 1m	2 m
Elbows D = 2m	2 m
Total horizontal extension	4 m

#### Measure or calculate effective height (Hvert)


Flue lenght A	1 m
Roof mounted terminal	1 m
Total effective height	2 m

When calculating table 2: It is allowed.

Remove the flue restrictor!

### Calculation 2:

#### Calculation horizontal extension fig. 2b:

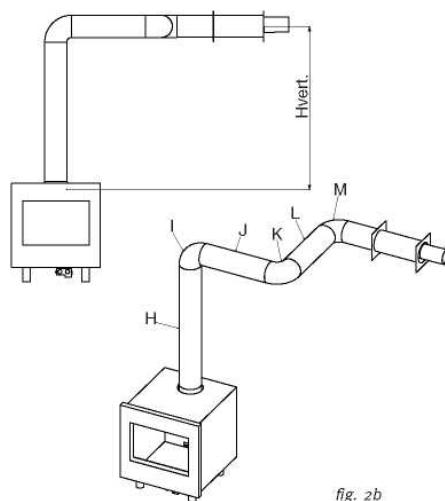

Flue lenght J + L = 0,5 + 0,5	1 m
Elbows K + M = 2m + 2m	4 m
Terminal	1 m
Total horizontal extension	6 m

#### Calculation effective height (Hvert)

Flue lenght H	1 m
---------------	-----

When calculating table nr. 2: Combination not allowed.

## Appendix B: Flue restrictor

Determining of the right flue restrictor:

- Calculate the total horizontal- and vertical length of the flue, according to the calculations displayed above
- Determine according to the table the right flue restrictor size
- When meeting an X, and when the values are outside the table, the combination is not allowed
- Normally the 30 mm flue restrictor is preinstalled

Glance		Horizontale lengte (m)						
		0	1	2	3	4	5	6
Werkelijke hoogte (m)	0	X	X	X	X	X	X	X
	0,5	X	X	X	X	X	X	X
	1	0	0	0	X	X	X	X
	1,5	30	30	0	0	X	X	X
	2	30	30	30	0	0	0	0
	3	40	30	30	30	0	0	0
	4	40	40	30	30	30	0	0
	5	50	40	40	30	30	30	0
	6	50	50	40	40	30	30	0
	7	50	50	50	40	40	40	X
	8	60	50	50	40	40	X	X
	9	60	60	50	50	X	X	X
	10	65	60	60	X	X	X	X
	11	65	65	X	X	X	X	X
	12	65	X	X	X	X	X	X

## Appendix C: Installation of the flue

### Connection with use of concentric duct material

- Make a hole of ø 153 mm for the wall or roof mounted terminal.
- The horizontal pipes need to rise away from the appliance at a rate of 3 degrees per metre
- Build the system starting from the appliance on.
- Make sure you place the pipes in the right direction, the narrow end towards the appliance.
- Make sure the pipes are fixed sufficiently, a wall clamp every 2m, so the weight of the pipes is not resting onto the appliance.
- The outside of the pipe can become hot (140 degrees). Stay 50 mm away from wall surface or sealing. Make sure to provide sufficiently heat resistant isolation when going through the wall or roof.
- Because of expansion or cooling down the concentric pipes can turn loose. It is recommended to fix the spring clip with a self tapping screw at inaccessible places.
- To get the exact measure flue length you can use cut down concentric pipe, wall mounted terminal or roof mounted terminal. To obtain a smoke sealed connection, the inner pipe must be 20 mm longer than the outside pipe.

### Connection onto an existing chimney

You can connect the appliance onto an existing chimney. The existing chimney then functions as air supply, where a flexible stainless steel liner (to BS715) of 100 mm performs the flue function.

#### Requirements:

- Enough free space above the appliance
- The chimney only supply's air to this appliance
- The existing chimney needs to be clean and very well swept
- The existing chimney needs to be airtight
- The existing chimney needs to have an opening of min. 150 x 150 mm

1. Place the aluminium closure plate (A) onto the chimney. Permanently attach and make airtight.
2. Pull the liner (C) through the chimney.
3. Connect the liner onto the roof terminal and fix this with the clamp provided with the chimney connection set.
4. Fixing the chimney sealing plate (D) and place the 150 mm grommet into the hole of the sealing plate.
5. Fix the sealing plate air tight into the builders opening (use isolation rope from the chimney connection set to make the plate air tight).
6. Slide pipe (E) 150mm length 500mm into the sealing plate. Slide this pipe so that you have enough space later on to assemble the liner.
7. Install the appliance.
8. Connect the flexible stainless steel liner onto the appliance using the 100mm pipe (F) as adapter.
9. If the distance from the flue outlet to the sealing plate is bigger then 300 mm, you have to use a concentric pipe first.
10. Slide the outside pipe onto the appliance or concentric extension so that you have a air tight connection.

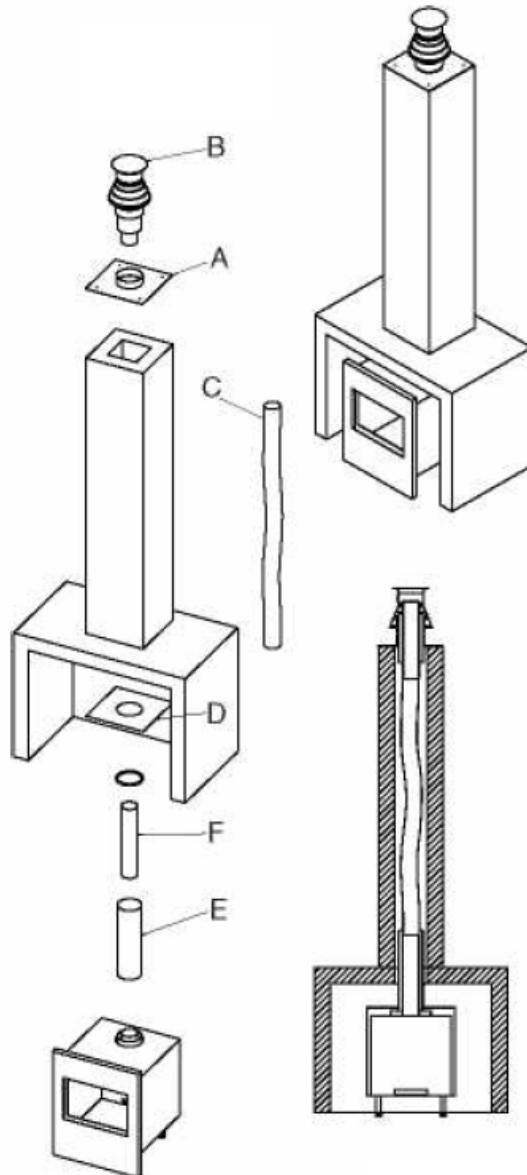


Fig. 5.1


## Appendix D: Spare parts

Glance	UK	IRL
Description	Number	Number
Glass	04510900	04510900
Burner G20 Natural	20532305	20532305
Burner G30 LPG	20532335	20532335
Logset	20858900	20858900
Ignition cable	06022030	06022030
Remote Set	20604500	20604615
Pilot light (natural)	37001047	37001047
Pilot light (LPG)	37001047	37001047
Thermocouple	37002048	37002048
Bougie	06006500	06006500
Embers	20793400	20793400
Spraypaint outside	09000014	09000014
Spraypaint inside	09000008	09000008
Cararra pebbles (4 bags)	20799100	20799100

## Appendix E: Technical specifications

Country		UK	UK	IRL	IRL
Cat		II 2H+	II 2H+	II 2H+	II 2H+
Appliance type		C11 of C31	C11 of C31	C11 of C31	C11 of C31
Reference gas		G20	G31	G20	G31
Input (nett)	[kW]	9.6	8.3	9.6	8.3
Efficiency class		2	2	2	2
Inlet pressure	[mbar]	20	37	20	37
Gasrate (15°C &		0.935 m <sup>3</sup> /h	640g/h	0.935 m <sup>3</sup> /h	640g/h
Working press (high)	[mbar]	12	26	12	26
Injector size	[mm]	Bray 800	Bray 280	Bray 800	Bray 280
Reduced input restr	[mm]	2.1	1.1	2.1	1.1
Pilot assembly		Sit 145-019	Sit 145-019	Sit 145	019
Code		Nr 30	Nr 23	Nr 30	Nr 23
Flue system					
Flue size	[mm]	Ø 100-150	Ø 100-150	Ø 100-150	Ø 100-150
Std. Flue restrictor	[mm]	30	30	30	30
Gascontrol		GV36-C5AOEHC68M	GV36-C5AODHC68M	GV36-C5AOEHC68M	GV36-C5AODHC68M
Remote control		G30-ZRRS	G30-ZRRS	GV36FAB	GV36FAB
Receiver	V	4x1,5V AA	4x1,5V AA	230-240 50hz	230-240 50hz
Remote (batteries)	V	2x1.5V AAA	2x1.5 AAA	1x9V MN1601	1x9V MN1601
Connection		8mm nut/olive	8mm nut/olive	8mm nut/olive	8mm nut/olive


## Appendix F: Dimensions

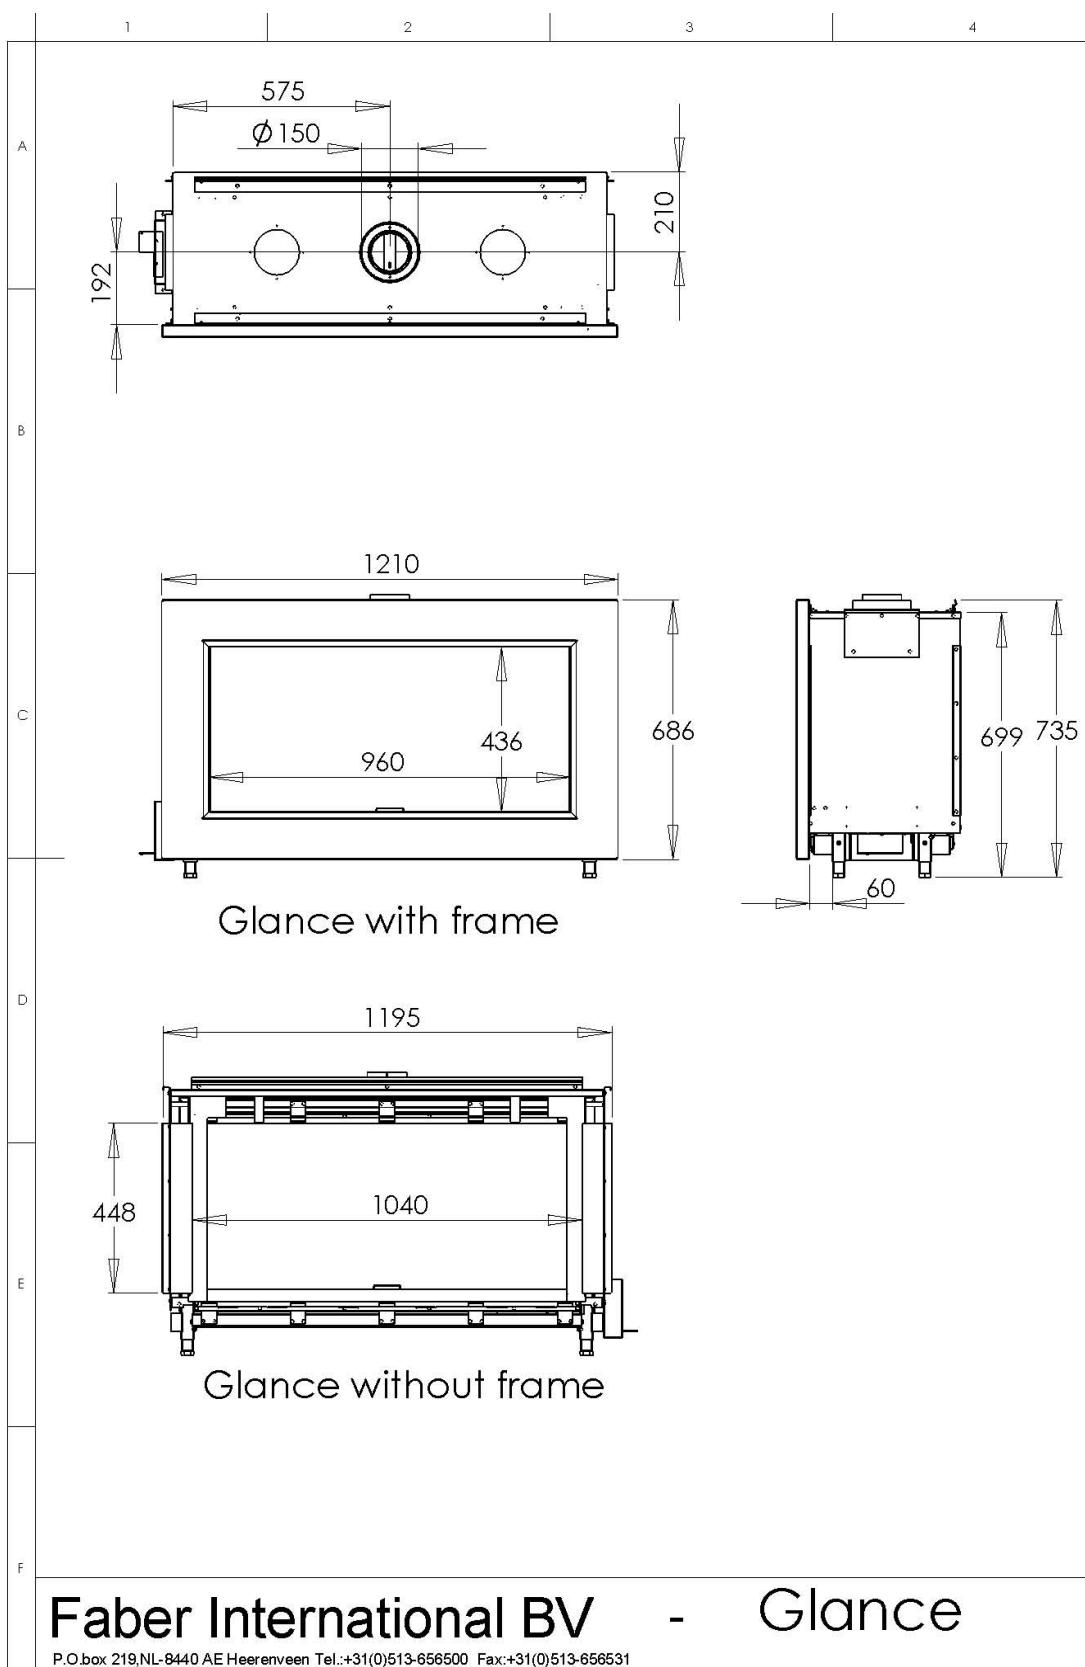

**Faber International BV - Glance**

P.O.box 219,NL-8440 AE Heerenveen Tel.:+31(0)513-656500 Fax:+31(0)513-656531

## Appendix G: Terminal position

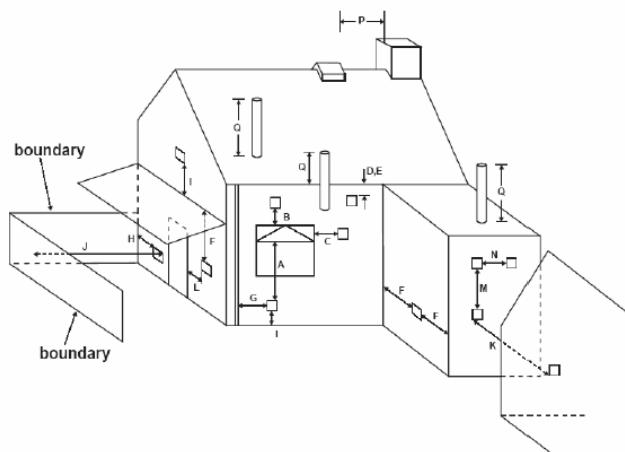

Dimension	Terminal position (kW input 7.5 kW expressed in net)	Balanced flue room sealed	
		Natural	Draught
A	Direct below an opening, airbrick, opening windows, etc.	300	mm
B	Above an opening, airbrick, opening window, etc.	300	mm
C	Horizontally to an opening, airbrick, opening window, etc.	300	mm
D	Below gutters, soil pipes or drain pipes	500	mm
E	Below eaves	500	mm
F	Below balconies or carport roof	600	mm
G	From a vertical drain pipe or soil pipe	300	mm
H	From an internal or external corner	600	mm
I	Above ground roof or balcony level	300	mm
J	From a surface facing the terminal	600	mm
K	From a terminal facing a terminal	600	mm
L	From an opening in the carport into the dwelling	1200	mm
M	Vertically from a terminal on the same wall	1500	mm
N	Horizontally from a terminal on the same wall	300	mm
P	From a vertical structure on the roof	600	mm
Q	Above intersection with roof	500	mm



**www.faber.nl** - **info@faber.nl**

**Saturnus 8 NL - 8448 CC Heerenveen**

**Postbus 219 NL - 8440 AE Heerenveen**

**T. +31(0)513 656500**

**F. +31(0)513 656501**

