


MODEL: GDC9RWA / GDC12RBA / GDC12RWA GDC12RCWA / GDC12RCBA / GDC14RBA GDC14RWA / GDC14RCWA / GDC14RCBA

INSTRUCTIONS FOR USE

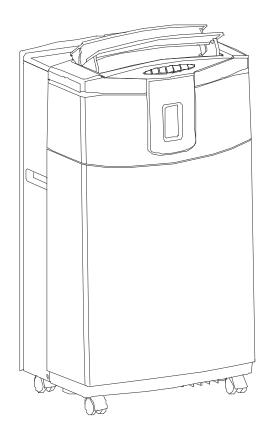

PORTABLE AIR CONDITIONER

VERY IMPORTANT!

Do not install or use your portable air conditioner unit before carefully reading this instruction manual. Please retain this manual for product warranty and future reference

CAUTION!

- 1." DO NOT BLOCK VENTILATION "! Please make sure the inlet and outlet ventilation is not blocked at all times.
- 2. Operate this unit on a horizontal surface to avoid water leakage.
- 3. Do not operate this unit in an explosive or corrosive atmosphere.
- 4. Operate this unit in an ambient temperature of 17~43 degrees Celsius when switched to cooling and when switched to heating, the ambient operating temperature should be 5~23 degrees Celsius.
- 5. Clean the air filter periodically to enjoy the most efficient cooling.
- 6. When the unit is turned off, please wait at least 3 minutes before restarting it.

 This is to prevent the compressor from being damaged.
- 7. This unit needs to be plugged into a 10 Amp power point.

 Please do not use any extension cords with this unit.
- 8. This unit is for indoor operation only.
- Make sure the adjustable air vent is open, and also the exhaust pipe and drain pipe if fitted are extended to the closest window before using.
- 10. When the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
- 11. The batteries, from the remote control, must be removed from the appliance before it is scrapped and must be disposed of safely.
- 12. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 13. Children should be supervised to ensure that they do not play with the appliance.

Important.

The air conditioning unit must always be stored and transported upright.

In case of doubt we suggest to wait for at least 24 hours before you start the air-conditioning unit.

CONGRATULATIONS ON YOUR SELECTION OF A QUALITY PORTABLE AIR CONDITIONER

PORTABLE AIR CONDITIONER

Your Air Conditioner has been designed and manufactured to the highest standards of modern engineering.

One of its many features is a remote control device which allows you to control all functions conveniently.


- Moves easily from room to room on easy glide castors
- No installation required-just plug into any household 10 Amp power outlet
- Refrigerated air system designed to cool instantly whenever you want it
- Heated air system design heats instantly whenever you want it
- Powerful dehumidification process and filtered air cycle for improved breathing conditions
- If the remote control function is not required, your one touch electronic pad provides easy to identify manual operation
- 24 hour programmable timer that can be used with either the air conditioning or dehumidification setting
- Unique sleep control function
- 220-240 Volt 50Hz operation
- 1.6 meter cord with plug

CONTENTS


- 1 / Air control unit
- 2 / 1-remote control unit
- 3/ Window kit

NAMES OF THE PARTS

- 1. Push button switch
- 2. Display screen
- 3. Adjustable air vent
- 4. Window kit adaptor
- 5. Exhaust tube
- 6. Drain hose (cooling &heating model only)

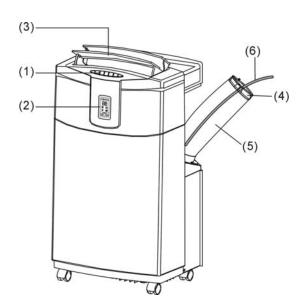


- 7. Cool inlet
- 8. Cool air filter
- 9. Hot inlet
- 10. Drain plug
- 11. Hot air filter

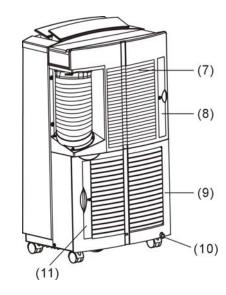

Note: make sure drain plug is fitted before use. (10)

PUSH BUTTON SWITCHES & DESCRIPTION OF FUNCTION

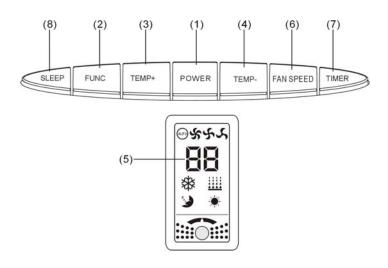

1. POWER KEY Pre

Press to turn unit "ON" or "OFF".

2. FUNCTION

Press this key to select refrigeration, heat or dehumidification.

(Heating function is only available in the following models: GDC12RCWA/GDC12RCBA/GDC14RCWA/GDC14RCBA)

3. TEMPERATURE REGULATION KEY (UP)

This key raises the preset temperature by 1°C each time it is pressed to a maximum of 30°C

4. TEMPERATURE REGULATION KEY (DOWN)

This key lowers the preset temperature by 1°C each time it is pressed to a minimum of 17°C.

X In normal conditions, the temperature data which appears on the panel is the ambient temperature, not the temperature which is set by the user. When the user has adjusted and set the temperature to desired level, the data on the panel will return to the ambient temperature 5 seconds later.

The ambient temperature will descend or change according to the temperature which is set by the user, but the temperature descendant time and speed will depend on the environment and space where it operates.

For example, if the ambient temperature is too hot or the room is too large, the rate at which the temperature descends will be slow, and the cooling efficiency will be poor as well.

5. L.E.D. DISPLAY Indicates the current room temperature or the time setting. If it's adjusted by the user the display will return to the pre-set temperature automatically.

Error Display

E1: Indicates open circuit or short circuit in room temperature sensor.

E2: Indicates open circuit or short circuit in pipe temperature sensor.

E7: Indicates the water is full inside.

Please contact an authorized service centre if any of the above error messages are shown

6. SPEED

Press to select LOW, MEDIUM, HIGH or AUTO fan speed. If "AUTO" is selected, the unit operates at maximum cooling capacity when the room temperature less the setting temperature

is above 2°C.

When the room temperature less the set temperature is below

2°C, the unit operates at middle cooling capacity.

When the room temperature equal the set temperature, the unit operates at minimum capacity.

If "HIGH" is selected, the unit operates at maximum cooling capacity regardless of the pre-set temperature. Similar operation is applied when "MEDIUM" OR "LOW" is manually selected.

TIMER

7. PROGRAMMABLE Programmable timer ON/OFF key.

TIMER-ON: The timer-on key is used to turn the unit on automatically when the set time is reached.

(The indicator light will be turned on when the timer is functioning.)

- 1. Press the "TIMER" key at stand-by status to set the time. Choose the function desired (refrigeration, heat or dehumidification.)
- 2. Once the set hour has come to an end, the unit will turn on automatically.
- 3. If you press the "POWER" key before the timer is complete, the set time will be cancelled and the unit will remain turned on.

TIMER-OFF: The timer-off is used to turn the unit off automati-

cally after the set time is over.

8. SLEEP CONTROL **FUNCTION**

When setting the "sleep comfort" mode please ensure that you then set the number of hours required and press the timer button till those hours are indicated on the L.E.D display. After setting the hours the L.E.D. display will automatically return to the current pre-set temperature. To increase this setting press the "UP" button and for each press, the temperature will be increased by 1°C. Likewise to set for a lower temperature, press the "DOWN" button and for each press, the temperature will be decreased by 1°C.

During the course of this cycle, to ensure maximum sleep comfort, the micro-processor memory will raise the pre-set temperature 0.5°C each half hour to a maximum of 2°C over two hours and then maintain that temperature for the balance of the time set.


The portable air conditioner is fitted with a 3 minute compressor delay protection circuit which simply means that the compressor requires 3 minutes to start. From either being switched on, or when changing from "dehumidify" to any air conditioning cycle chosen.

9."E7"

When the unit warns of full water, please unplug the water stopper at the back of the unit and then lean the unit to drain the water out. Then the unit can be restarted. If the error: E7 is presented again, please find a specialized person to repair.

Note: Heating function does not operate if the ambient temperature is over 23 °C. Cooling function does not operate if the ambient temperature is over 43 °C. (Heating function is only available in the following models: GDC12RCWA/GDC12RCBA/ GDC14RCWA / GDC14RCBA)

REMOTE CONTROL FUNCTION

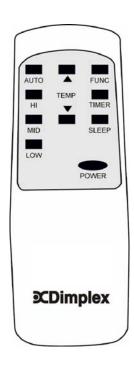

- 1. POWER
- 2. FUNC
- 3. TIMER
- 4. AUTO
- 5. HI
- 6. MID
- 7. LOW
- 8. SLEEP
- 9. TEMP.

ON/OFF switch

Function "MODE" selector

Hourly programming

Automatic fan speed

High fan speed

Medium fan speed


Low fan speed


Night operation selector

Temperature selector

INSTALLATION

Install the portable air conditioner in a flat and spacious location where the air inlets and outlets will not be blocked. A minimum clearance of 40cm from a wall or other obstacles should be kept (as pictured below). The appliance should not be used in the laundry.

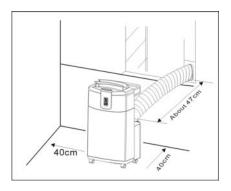


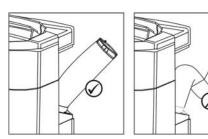

NOTICE

For Reverse cycle Cooling / Heating models only. (GDC12RCWA / GDC12RCBA / GDC14RCWA / GDC14RCBA)

This unit can evaporate the condensation and flow out through the exhaust hose automatically when the unit is in the cooling function. Contrarily when the unit is in heating function and the water level reaches the detected level, it will begin to pump for sixty seconds. After sixty seconds in the pump function, if the water level is still on the detected level, the unit will stop working and present "E7" warning. Then after three seconds of revealing error, the unit will rework automatically. Please make sure the drain plug is fitted to the drain outlet before use (10), and the exhaust and drain pipe is extended to the closest window when the unit is running.

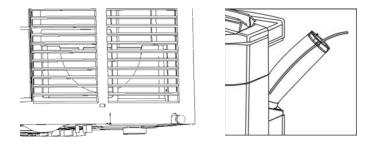

MAINTENANCE

PLEASE DISCONNECT THE POWER CORD BEFORE.

AIR FILTER


The air filter located on both sides of the unit can be removed, simply by pulling the frame in an upward motion.

CONDENSER/EVAPORATOR


Use a brush attachment with a vacuum cleaner.

CABINET

Wipe with a damp cloth and polish with a soft cloth.

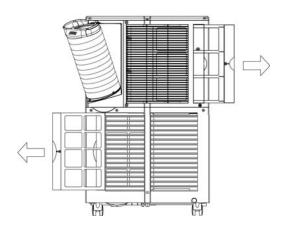

To remove the air filter, please follow the arrow direction and push the filter lightly. Then take out the filter for cleaning.

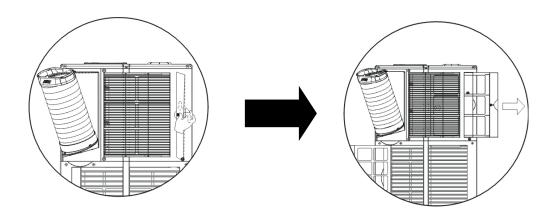

POWER SUPPLY

- (1) Confirm the correct power.
- (2) Insert the plug into the power outlet firmly.
 In case of a dangerous water leak, prevent the power cord from getting wet.
- (3) Don't pull the power cord by force because it will cause damage to the power cables.

PLACE FOR USE

- (1) Because the machine exerts hot air, please don't operate it in a confined place.
- (2) Don't place the machine in a sunlit corner otherwise the colours of the cabinet will fade.



HELPFUL HINTS

This unit is fitted with a special thermal cut off device.


When selecting the refrigerating function, the unit should operate in room temperatures between 17-43°C, and when selecting the heating function the room temperature must be between 5-23°C.


Please ensure the unit is not placed against objects which will obstruct air intake e.g. furniture or curtains as this will affect it's performance drastically.

Do not place the unit in direct sunlight, as this may cause the unit to overheat and turn off.


EXHAUST PIPE AND DRAIN PIPE

- To remove exhaust pipe, press down slightly and pull away from the unit.
- Picture indicates the removal of the exhaust pipe.
- Make sure the exhaust pipe and the drain pipe are extended to the closest window.

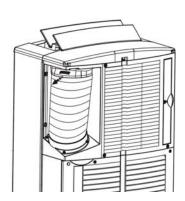

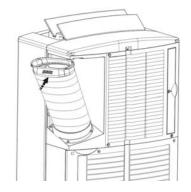



Install the Flexible Exhaust Hose and the Adjustable Window Slider Kit as depicted in Fig.1 & Fig.1a.

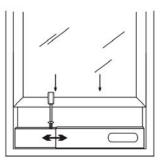

Window slider kit min: 66cm


max: 120cm

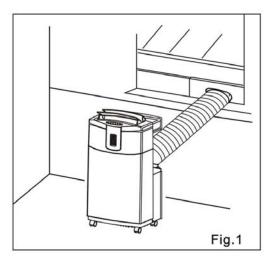

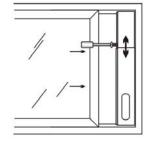

Window slider kit

min: 66cm max: 120cm

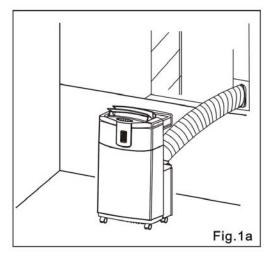

TROUBLE SHOOTING

Never try to repair or dismantle the air conditioner yourself. Unauthorized repairs may result in the loss of warranty and can endanger the user and the property.

	The same same same same same same same sam	area and the break and
Problem	Cause	Solution
The air	No power supply.	Connect to a functioning outlet
conditioner does		and switch on.
not function.	The alarm light is on.	Empty the internal water
		container.
	Timer function is active.	Deactivate TIMER function.
The air	In direct sunlight.	Close curtains.
conditioner does	Windows or doors open,	Close doors and windows, place
not seem to	many people or a heat	an extra air conditioner.
perform.	source in the room.	
	Dirty filter	Clean the filter(s).
	Air inlet or air outlet blocked.	Remove the blockage.
	Room temperature lower	Change temperature selection.
	than the selected value.	
The unit is noisy.	Unit is not level.	Place on an even, solid surface
		(less vibrations.)
The compressor	The overheat protection is	Wait 30 minutes until the
does not work.	probably activated.	temperature has decreased, then
		turn the unit on again.
The remote	Distance too long.	Make sure the remote control is
control does not	Remote control signal not	correctly aimed at the control
function.	detected by the control	panel.
	panel.	
	The batteries are drained	Replace the batteries.
To commont manifest	a mat magnition and in the tal-1	or if the recommended colutions fail

To correct problems not mentioned in the table and/or if the recommended solutions fail to solve the problem, please contact an authorized service centre.

Please contact Glen Dimplex for your nearest authorized service agent:

Australia – 1300 556 816 New Zealand – (09) 274 8265

SPECIFICATIONS

Model No.	GDC9RWA	GDC12RWA / GDC12RBA
Power Source	220-240V~ 50Hz AC	220-240V~ 50Hz AC
Power Consumption (EN14511)	1080W	1452W
Rated Power (EN60335)	1250W	1480W
Cooling Capacity	2600W	3500W
Air Flow	400 M ³ /H	420 M ³ /H
Moisture Removed	32 L/DAY	50 L/DAY
Refrigerant	R410A	R410A
Min. room size	10m ²	10m ²
Dimensions (mm)	476W x 358D x 840H	476W x 358D x 840H
Net Weight	28.5KG	29.5KG
Model No.	GDC12RCWA / GDC12RCBA	GDC14RWA / GDC14RBA
Power Source	220-240V~ 50Hz AC	220-240V~ 50Hz AC
D 0 "		
Power Consumption		
Cooling / Heating	1452W / 1452W	1660W
•	1452W / 1452W	1660W
Cooling / Heating	1452W / 1452W	1660W
Cooling / Heating (EN14511)	1452W / 1452W 1480W	1660W
Cooling / Heating (EN14511) Rated Power		
Cooling / Heating (EN14511) Rated Power (EN60335)	1480W	1700W
Cooling / Heating (EN14511) Rated Power (EN60335) Cooling Capacity	1480W 3500W	1700W 4000W
Cooling / Heating (EN14511) Rated Power (EN60335) Cooling Capacity Heating Capacity	1480W 3500W 3500W	1700W 4000W N/A
Cooling / Heating (EN14511) Rated Power (EN60335) Cooling Capacity Heating Capacity Air Flow	1480W 3500W 3500W 420 M ³ /H	1700W 4000W N/A 450 M ³ /H
Cooling / Heating (EN14511) Rated Power (EN60335) Cooling Capacity Heating Capacity Air Flow Moisture Removed	1480W 3500W 3500W 420 M ³ /H 50 L/DAY	1700W 4000W N/A 450 M ³ /H 60 L/DAY
Cooling / Heating (EN14511) Rated Power (EN60335) Cooling Capacity Heating Capacity Air Flow Moisture Removed Refrigerant	1480W 3500W 3500W 420 M ³ /H 50 L/DAY R410A	1700W 4000W N/A 450 M ³ /H 60 L/DAY R410A
Cooling / Heating (EN14511) Rated Power (EN60335) Cooling Capacity Heating Capacity Air Flow Moisture Removed Refrigerant Min. room size	1480W 3500W 3500W 420 M ³ /H 50 L/DAY R410A 10m ²	1700W 4000W N/A 450 M ³ /H 60 L/DAY R410A 10m ²

Model No. GDC14RCWA / GDC14RCBA

Power Source 220-240V~ 50Hz AC

Power Consumption

1660W/1660W

(EN14511) Rated Power

(EN60335)

1700W

Cooling Capacity 4000W

Heating Capacity 4000W

450 M³/H Air Flow

Moisture Removed 60 L/DAY

Refrigerant R410A

10m² Min. room size

Dimensions (mm) 476W x 358D x 840H

Net Weight 32.5KG

If you have any issues with your unit, please contact Glen Dimplex for your nearest service agent. Proof of purchase is required at the time of service.

Glen Dimplex Australasia Ltd **Glen Dimplex Australia Pty Ltd**

38 Harris Road, East Tamaki, 2/205 Abbotts Road,

Manukau, Auckland 2013 Dandenong South VIC 3175

New Zealand Australia

Ph: (09) 274 8265 Ph: 1300 556 816

Fx: 0800 112 020 Fx: 1800 058 900