



## **FASCIA ASSEMBLY & INSTALLATION**


- 1) Lay the fascia panels flat, face down on something soft so they don't scratch.
- 2) Align the bottom flange of each side panel with the corresponding end of the bottom rail. Using the self-tapping screws provided, attach the bottom rail to the bottom flanges of the side panels. Tighten the screws only loosely at this stage. (See Fig. 1)

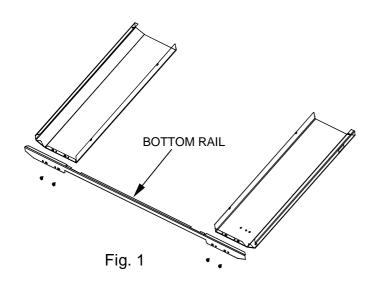

3) If not already fitted push the Masport logo badge into the holes in the bottom left corner of the fascia and attach it using the clips provided. (See Fig. 2)

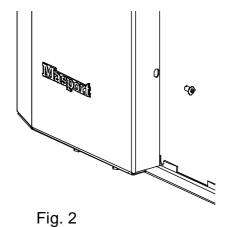

4) Lower the top panel assembly into place with the locating prongs pointing down so that they fit inside the top edges of each side panel. Fasten the top panel to the case through the two holes in the lower flange of the top panel assembly. See Fig. 3

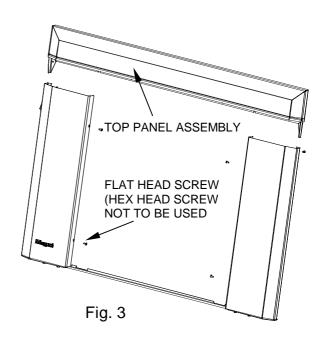

- 5) Offer the fascia assembly up to the case to obtain the correct width for the side panel spacing keeping the inside flanges of each panel on the inner side of the mounting flange of the fireplace. Carefully remove the assembly and tighten the screws fastening the bottom rail to the side panels.
- 6) Connect the fan wires, red, brown and orange, to the fan switch, in the following positions. (See Fig. 4)

-Brown wire to central terminal, -Red wire to top terminal, -Orange wire to bottom terminal.

Part Number - 590475 1 Issue A 22/09/2004





Fig. 4

- 7) Ensure that the wires are away from the side of the fireplace. The power cord should be run behind the fascia panel and out through the slot in the side of the fascia. The rubber grommet on the power cord should be inserted into the slot to protect the mains lead. against possible damage.
- 8) Offer the fascia assembly up to the case once more and secure through the two holes on the inner edges of each fascia side panel and two holes of top panel assembly using the screws provided. (See Fig. 5)

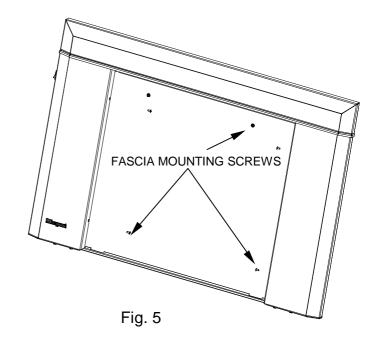

Part Number - 590475 2 Issue A 22/09/2004